INSTRUCTION

FEATURES:

- 3V operating voltage (1 x 2032 battery)
- Display real time clock and week day
- Daily alarm function
- 99:59:59 count down timer
- Report real time clock and calendar
- Real time setting function
- Alarm setting function
- Timer setting function
- Calendar setting function
- Year range 1990-2049
- 12/24 hour selectable
- Volume Hi/Lo selectable
- Hourly Chime function
- 9 operating key Mode, Hour/Year, Min/Month, Sec/Date/12/24 Hour, Alarm/Timer On/Off, Talking, Volume Hi/Lo, Hourly Chime On/Off, Reset

INSTALLATION/ REPLACEMENT OF BATTERY

1. Open the battery door.

- Insert the battery into the battery compartment according to the polarity symbols (+, -) marked near the battery door.
- 3. Replace the battery door.

Warning: Keep battery out of the reach of children swallowing a battery can be fatal.

Note: If the clock worked not properly, use the paper clip to press the RESET key to reset the clock.

CAUTION:

- Use only fresh battery of the required size and recommended type.
- Always remove old and weak battery.
 Battery leak chemicals that can destroy electronic parts.
- Dispose of old battery promptly and properly. Do not burn or bury it.
- If the display is dim and or the voice is weak, change the fresh battery.

OPERATION KEYS

CHIME ON/OFF KEY

VOLUME KEY

TALKING KEY

- Press once to announce the current time
- Slowly press twice to announce the calendar
- Press once to stop the TIMER alarm sound when in TIMER MODE
- Press once to announce the remaining time of the TIMER when you are set in TIMER MODE.
- Announce the status of the display showed
- select the hourly chime on or off
- reset to zero value in TIMER SETTING MODE
- select the voice HI or LOW

MODE KEY

Time Mode


Mode

Alarm Setting Mode

Calendar Setting Mode

Setting Mode

Timer Setting Mode

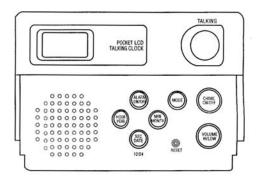

ALARM/TIMER ON/OFF KEY

- select alarm ON or OFF in TIME MODE
 And ALARM SETTING MODE
- select TIMER START/STOP in TIMER MODE
- repeat function when timer restart
- HOUR and YEAR setting key
- MIN and MONTH setting key
- SEC and DAY setting key
- select 12/24 hour format in TIME MODE

RESET KEY

HR/YEAR KEY

MIN/MONTH KEY

- reset the display and function

TIME SETTING MODE

SEC/DATE/12/24 KEY

HOUR, MIN and SEC key will adjust the Hour, Min and Sec.

ALARM SETTING MODE

- HOUR, MIN key adjust hour and min for daily alarm.
- ALARM ON/OFF key to select the on or off for the daily alarm

CALENDAR SETTING MODE

- YEAR key select setting and adjust the year (year range 1990-2049)
- MONTH DATE key select setting and adjust the month and day

TIMER SETTING MODE

- HOUR, MIN and SEC key adjust the HOUR, MIN and SEC
- ALARM ON/OFF key to start or stop the Timer.
- ANNOUNCEMENT ON/OFF key, reset zero value in TIMER SETTING mode

SPECIFICATION

Power	3V	1x2032	battery
Dimension	. 95	x 65 x 1	2.5 mm

Specifications are typical: individual units might vary. Specifications are subject to change and improvement without notice.